

Instruction manual

LED under-cabinet light McShine, PIR sensor, warm white, 4xAAA batteries.

Dear customer

congratulations on the purchase
your McShine LED under-cabinet light.

With this choice you have chosen a product
product, which combines appealing design and
design and technical features.

Please read the following connection and
carefully and follow these instructions
and follow them, in order to get the longest and safest
from your product for as long as possible.
Please read the operating instructions carefully before
carefully before using the device.

We wish you much pleasure with your
new product!

Features

This LED under-cabinet light is robust and elegant at the same time!
Due to the practical battery operation, this light provides powerful light
even without a mains connection. The built-in PIR motion sensor allows
it to turn on and off automatically. The light is therefore perfect for
e.g. caravan or entrance light.


Safety instructions

- Keep the operating instructions of the device
- Check the device regularly for damage
- Do not modify the product or accessories
- The product is not suitable for outdoor use.
- Do not short-circuit the connections and the circuits
- Do not use the product unless it is in perfect condition.
- perfect condition. Do not operate a defective
- Check the device for damage before putting it into operation.
If this is the case, please do not put the device into operation!
- Keep the device away from moisture and humidity.
- Avoid extreme loads such as extreme heat or cold, wetness, microwaves, mechanical pressure and vibrations.
- In case of questions, defects, mechanical damage, and other problems, please contact the dealer or manufacturer.
- Repair and maintenance work on the device may only be carried out by trained personnel!
- The product is not a toy and does not belong in children's hands!
- Do not leave the packaging material carelessly lying around, plastic foils / bags, styrofoam parts, etc.,
could become a dangerous toy for children.
- This product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns
and death in as little as 2 hours. Do not swallow the battery, risk of burns.
- Keep new and used batteries out of the reach of children. If the battery compartment cannot be closed securely, stop
using the product and keep it away from children. If you think batteries may have been swallowed or lodged in any
part of your body, seek medical attention immediately.



Technical details:

- PIR motion sensor
- PIR sensor range: 3m
- Modes: Automatic / Off
- Operation via 4x AAA Mignon batteries (not included)
- Material: aluminum
- dimmable
- With continuous operation: 4h runtime
- 10 SMD LEDs
- warm white
- color temperature 3000K
- beam angle 120
- color rendering index 80
- hold ON/OFF button for dimming
- easy installation via stick-on or integrated magnet
- dimensions: 188x30mm

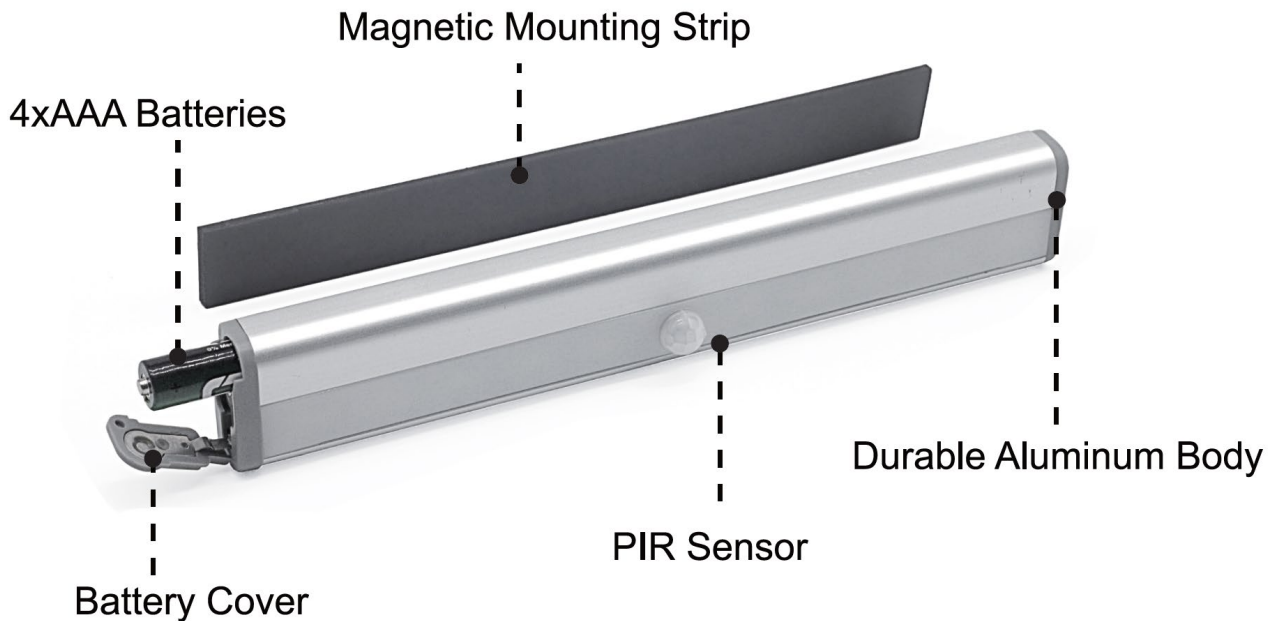

Installation

The LED under-cabinet light can only turn on when it is dark. It will not turn on if the light sensor receives enough light. Do not install the light fixture too close or in an environment with high temperatures. Do not install the light near humid places or in high temperatures for the tape to work well.

1. Insert the batteries before use. Make sure the batteries are inserted the right way around.
2. Close the battery cover.
3. Remove the sticker on the magnetic strip. You can attach the light anywhere you want.
4. With the magnetic attachment strip, you can easily remove and reattach the light.

Operation

Automatically turn on within 3m. Automatically turn off after 25-30 seconds when no motion is detected.

Disposal instructions

According to the European WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be recycled or disposed of separately, because toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly. As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment free of charge at the end of its service life to the manufacturer, the point of sale or to public collection points set up for this purpose. Details are regulated by the respective state law. The symbol on the product, the operating instructions and/or the packaging indicates these regulations. By separating, recycling and disposing of old equipment in this way, you are making an important contribution to protecting our environment.

Packaging can be disposed of free of charge at the appropriate collection points - paper in the paper garbage can, plastics in the yellow bag and glass in the used glass container.