

Item number: 1453239

Instruction manual

LED clip light einlicht „Halo“

3,3 W, 438 lm, step-dimmable, warmwhite



TECHNICAL DATA

Operating voltage:	230 V
Light color:	warmwhite
Color temperature:	3000 K
Absorbed power:	3,3 W
Lifetime:	30000 h
Illumination technology:	LED
Outer diameter:	75 mm
height:	475 mm
Energy efficiency class:	G
Dimmable:	3 step dimming
Swiveling	flexible swiveling through gooseneck

DISPOSAL INSTRUCTIONS

By separating materials, recycling and disposing of old equipment in this way, you are making an important contribution to protecting our environment.

Packaging can be disposed of free of charge at the appropriate collection points:

- Paper in the paper bin
- Plastics in the yellow bag
- Glass in the used glass container

WEEE disposal note

According to the European WEEE Directive, electrical and electronic WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be recycled or disposed of separately, because toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly.

As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment free of charge at the end of its service life to the manufacturer, the point of sale or to public collection points set up for this purpose.

Details are regulated by the respective state law.

The symbol of the wheeled garbage can on the product, the operating instructions and/or the packaging refers to these regulations.

PRODUCT DESCRIPTION

LED gooseneck light for easy mounting in a socket. The built-in bulb provides a wide-beam clear light. The socket light is dimmable in 3 steps (step-dimmable) and thanks to 36 cm flexible gooseneck flexible use. The dimmable lamp can be easily switched ON and OFF or dimmed via the switch on the base. Ideal as a reading lamp and bedside lamp by the bed or sofa. Suitable as a lamp for the work surface in the kitchen, office or workshop.

ASSEMBLY INSTRUCTIONS

To connect, plug the clamp light's plug into the socket and attach the light using the clamp.

Bend the gooseneck into the desired position. The light is turned on by pressing the power switch on the lamp head. By touching the icon, you can dim the light in various levels. The dimmer switches between 100%, 70%, and 30% brightness. This applies to every power-on cycle and after disconnecting from the power grid. The light always starts at 100% when turned on for the first time.

When disconnected from the power grid, it does not remember the last set brightness level.