

Item number: 1453638

Instruction manual

LED-Lantern

McShine „Retro“

23,5 cm, battery, warm white, dimmable

NE



TECHNICAL DETAILS

Operating voltage:	1,5 V 4×AA-Batteries (not included)
Light color:	warmwhite
Color temperature:	2700 K
Luminous flux:	300 lm
Absorbed power:	5 W
Lifetime:	50000 h
Illumination technology:	LED COB
Outer diameter:	16 cm
Height:	24 cm
Dimmable:	Yes
Carrying handle:	Yes
Hanging option:	Yes

OPERATION

- The LED lantern features a rotary dimmer switch.
- To turn on the lantern, the rotary switch is turned to the right, and a „click“ sound confirms the on state.
- The lantern now illuminates at the lowest brightness level.
- The rotary switch can be smoothly turned up to the maximum brightness.
- To turn off the lantern, the rotary switch is turned all the way to the left until it clicks.
- The lantern is now no longer illuminated.

Item number: 1453638

EN

SAFETY INSTRUCTIONS

- Before commissioning, check the device for damage. If this is the case, please do not put the device into operation.
- Please note: If you make any technical modifications to the device, the guarantee of the device will expire immediately.
- Keep the operating instructions of the device.
- Please do not look directly into the light source in order to avoid injury to the eye.
- Do not drop the device. It could be damaged if it hits a hard surface.
- Avoid installing the unit in places with high temperature differences or high humidity.
- Do not carelessly leave the packaging material lying around, Plastic foils/ bags, polystyrene parts, etc., could become a dangerous toy for children.
- The device does not belong in children's hands, it is not a child's toy!

Safety instructions Batteries

- Do not attempt to revive batteries/accumulators by heating or similar means.
- Do not immerse batteries/accumulators in water and store them in a dry, cool place, not a humid one.
- Do not throw batteries/accumulators into fire, open, weld, or solder them yourself.
- Do not short-circuit batteries/accumulators.

GENERAL NOTES

- Only use supplied original parts.
- The product has no replaceable parts.
- Do not attempt to open or repair the product.
- Do not clamp any parts inside the light.

INTENDED USE

- The product is suitable for indoor use and should not be exposed to rain.
- The product must only be used for its intended purpose, as per this user manual!



DE: Eine mehrsprachige Version dieser Anleitung und die Konformitätserklärung finden Sie unter folgendem Link:
EN: A multilingual version of this manual and the Declaration of Conformity can be found at the following link:
FR: Vous trouverez une version multilingue de ce manuel et la déclaration de conformité sur le lien suivant:
ES: Encontrará una versión multilingüe de estas instrucciones y de la declaración de conformidad en el siguiente enlace:
<http://ettgroup.de/product/1453638>

CARE INSTRUCTIONS

- Do not use damaged cables. New cables must have the same characteristics as the original.
- Do not connect to power when cleaning the lamp.
- Clean only with a soft cloth and neutral detergent. Avoid using alcohol or cleaning agents containing acetone, sulfur, beryllium, ammonia or other solvents.
- Avoid mechanical pressure and heavy contamination.
- The replacement of the lamp can only be provided by the manufacturer.

DISPOSAL INSTRUCTIONS

By separating materials, recycling and disposing of old equipment in this way, you are making an important contribution to protecting our environment. Packaging can be returned to appropriate collection points for free.

WEEE disposal note

According to the European WEEE Directive, electrical and electronic WEEE Directive, electrical and electronic equipment must not be disposed of with household waste. Their components must be recycled or disposed of separately, because toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly. As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment free of charge at the end of its service life to the manufacturer, the point of sale or to public collection points set up for this purpose. Details are regulated by the respective state law. The symbol of the wheeled garbage can on the product, the operating instructions and/or the packaging refers to these regulations.

Battery disposal note

Batteries and rechargeable batteries must not be disposed of with household waste. Every consumer is required by law to take all batteries and rechargeable batteries, whether they contain harmful substances or not, to a collection point in his or her community/district or to a retailer so that they can be disposed of in an environmentally friendly manner. Please return batteries and rechargeable batteries only when discharged.