

Instruction manual

Radio doorbell McPower "DB-16", up to 50m, 16 melodies, IP44 transmitter

Dear customer

congratulations on the purchase
your radio doorbell.

With this choice you have chosen a
product, which combines appealing design and
design and technical features.

Please read the following connection and
and operating instructions carefully and follow them
and follow them, in order to get the longest and safest
from your product for as long as possible.
Please read the operating instructions carefully before
carefully before using the device.

We wish you much pleasure with your
new product!



Safety instructions

- Keep the instruction manual of the device
- Check the device regularly for damage
- Do not modify the product or accessories
- Do not short-circuit the connections and circuits
- Use the product only if it is in perfect condition.
Under no circumstances put a defective device into operation!
- Check the device for damage before putting it into operation.
If this is the case, please do not put the device into operation!
- Keep the device away from moisture and humidity.
- Avoid extreme loads such as extreme heat or cold, wetness, microwaves, mechanical pressure and vibrations.
- In case of questions, defects, mechanical damage, and other problems, please contact the dealer or manufacturer.
- Repair and maintenance work on the device may only be carried out by trained personnel!
- The product is not a toy and does not belong in children's hands!
- Do not leave the packaging material carelessly lying around, plastic foils / bags, polystyrene parts, etc., could become a dangerous toy for children.

Technical details:

- Range: up to 50 meters
- Dimensions transmitter: 80x32x20mm
- Receiver dimensions: 90x73x23mm
- Operation transmitter: battery 3xAAA
- Receiver operation: battery 2xAA
- Transmitter: IP 44 splashproof
- frequency band: 433,92 MHz
- max. radiated power: <10dBm

Initial operation

- Before the first start-up, open the battery compartment on the back of the transmitter and the receiver and insert the batteries with the correct polarity. (2xAA in the receiver and 3xAAA in the transmitter).
- Now select one of the 16 melodies by pressing the toggle button.
- After pressing the ring button, the selected melody will sound.

Disposal instructions

According to the European WEEE Directive, electrical and electronic devices must not be disposed of with household waste. Their components must be recycled or disposed of separately, because toxic and hazardous components can cause lasting damage to health and the environment if disposed of improperly. As a consumer, you are obliged under the Electrical and Electronic Equipment Act (ElektroG) to return electrical and electronic equipment free of charge at the end of its service life to the manufacturer, the point of sale or to public collection points set up for this purpose. Details are regulated by the respective state law. The symbol on the product, the operating instructions and/or the packaging indicates these regulations. By separating, recycling and disposing of old equipment in this way, you are making an important contribution to protecting our environment.

Packaging can be disposed of free of charge at the appropriate collection points - paper in the paper garbage can, plastics in the yellow bag and glass in the used glass container.